

How to Setup VOIP Function on TD-VG3631



VOIP Account Setup:

Step 1

Please login on TD-VG3631 management page, and then go to **Voice** -> **SIP Account**, Click **Add**.

You will come to a page called '**SIP ACCOUNT BASIC**'. Fill in the following details

Profile name	Exetel	Phone number	*Your SIP number*
Display name		Authentication realm	
Authentication ID	*Your SIP number*	Password	*Your SIP password*
Registrar Address	Sip1.exetel.com.au	Registrar port	5060
SIP proxy	Sip1.exetel.com.au	SIP proxy port	5060
Outbound proxy	Sip1.exetel.com.au	Outbound proxy port	5060

Register via outbound proxy= yes

Step 2

Choose G.711ALaw as the **Preferred Codec 1**,
Choose G.711MuLaw as the **Preferred Codec 2**,
then click save.

Step3

Go back to **Voice** -> **SIP account** page. If the status is up, that indicates you have configured VOIP function correctly, and you can enjoy VOIP now!