


How to change your WiFi password on ZTE H268A Modem

1. Connect to the Modem via WiFi or Ethernet connection using your device – laptop, desktop, tablet or mobile phone
2. Login to the modem

Please use one of the Web browsers (Safari, Firefox, Chrome, Edge etc) you have on your computer or mobile device.




3. Enter the address on the address bar – 192.168.20.1 and hit enter

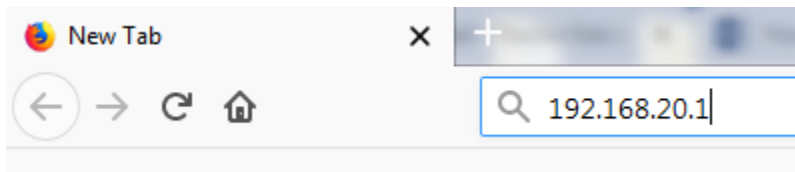

4. Enter modem login credential – default Username – admin, password – admin

If you have changed previously please enter those accordingly. If you don't remember, you may need do a factory reset to have the default settings.

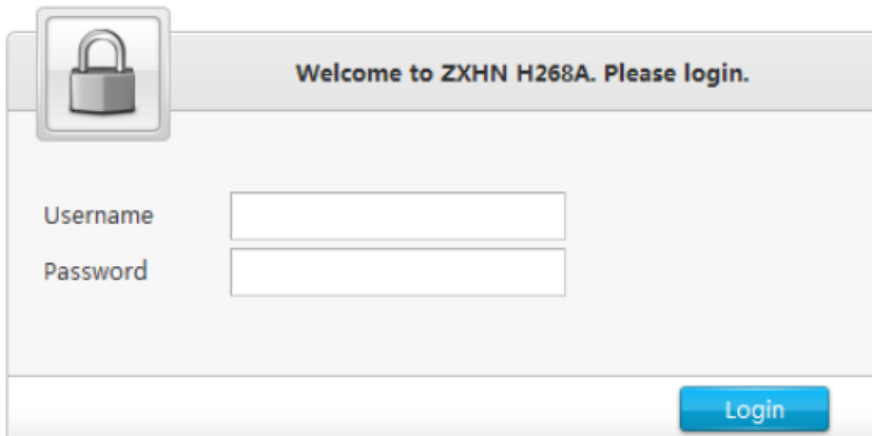A screenshot of the ZTE H268A modem login page. The page has a grey header with a padlock icon and the text 'Welcome to ZXHN H268A. Please login.'. Below the header, there are two input fields: 'Username' and 'Password'. At the bottom right, there is a blue 'Login' button.

5. Please follow below steps and go to the configuration page. You may use one of the below steps

- **Local Network->WLAN->WLAN Basic**

or

- **Home-> WLAN Devices->WLAN setting -> WLAN Basic**

Note: - The difference between 2.4GHz and 5GHz frequencies.

- 2.4GHz provides a coverage at a longer range and the speed transmit data is slower compared to 5GHz
- 5GHz provides coverage at a shorter range and the speed transmit data is faster compared to 2.4GHz
- Some devices such as Old laptops and mobiles might not have the 5GHz frequency to select as it is not compatible