


## Netcomm VoIP V100

### Setup Instructions

1. Plug Ethernet cable from router/switch to the VoIP unit.
2. Plug in the Telephone to the 'Phone' port on the Vo IP Unit
3. Plug in Power supply for the VoIP unit.
4. Power VoIP unit on.
5. Install VoIP software located on the setup CD.

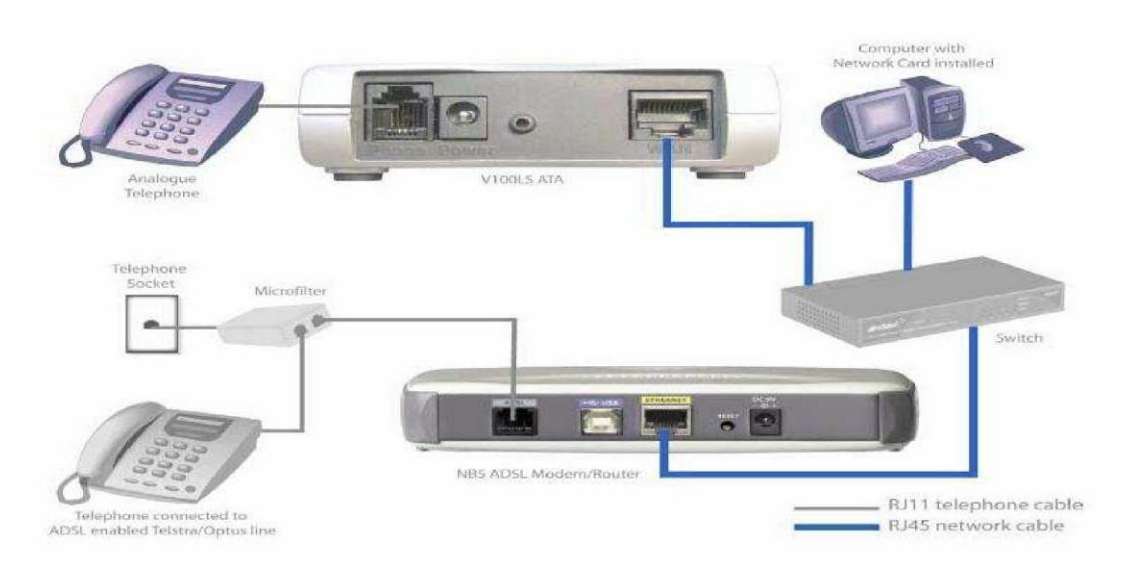

### Initial Setup

Depending on the how the network is setup, you will have to forward ports to the ATA unit.

Port is TCP 5060.

For more information on port forward please refer to the user manual for the router or navigate to [www.portforward.com](http://www.portforward.com)

## VoIP Service Setup

1. After the software has been installed open “Netcomm V 100 PCTool” located on desktop.
2. Make sure DHCP is enabled on the router/switch, check if all IP are correct and assigned by DHCP from the router/switch.
3. Click on the “SIP” tab
4. Fields to be configured

### *Under Phone Configuration fields*

- Username = Your Exetel VoIP Telephone Number

### *Under Proxy and Registrar fields*

- Proxy/registrar info = *SIP server provided in the Setup Email.*
- Domain info = *SIP server provided in the Setup Email.*
- Auth. Username = *Your VoIP telephone number*
- Auth. Password = *Your VoIP Password provided in the Setup Email*

6. All other settings should be left at defaults.
7. Click on apply.
8. If it says ‘Register Successful’ everything is set up correctly, you must save the settings. (If ‘register fail’ please double check all settings are correct by following ”Step 4” again).
9. Click on Tool
10. Click on Save to save the configurations.

*Below is a screenshot to show you where to input the settings provided in the setup Email*

The screenshot shows the NetComm V100 PCTool interface with the SIP configuration tab selected. The window is divided into several sections: Host, Phone Configuration, and Proxy and Registrar. The Host section includes fields for Max Digits (1-24), Port No., MaxRings, and Use Proxy. The Phone Configuration section includes fields for User Name, Display Name, Codec, and DTMF. The Proxy and Registrar section includes fields for Proxy / Registrar Info, Port No., Domain Info, Auth. User Name, Auth. Password, Expire, and Qvalue. Buttons for Apply, Refresh, and Close are located at the bottom of the window.

Section	Field	Value
Host	Max Digits (1-24)	24
	Port No.	5060
	MaxRings	15
	Use Proxy	Yes
Phone Configuration	User Name	SIP Number
	Display Name	John Smith
	Codec	G729
	DTMF	RFC 2833
Proxy and Registrar	Proxy / Registrar Info	sip1.exetel.com.au
	Port No.	5060
	Domain Info	sip1.exetel.com.au
	Auth. User Name	SIP Number
	Auth. Password	XXXXXXXXXX
	Expire	60
Qvalue (0-1.0)	0.8	

Buttons: Apply, Refresh, Close